




## Materials:

Upholstery weight, cotton drill, canvas, pvc


Note: You can always adjust the length of the bag depending on how wide you want the finished bag to be

Copyright: Feel free to use the pattern for any purposes

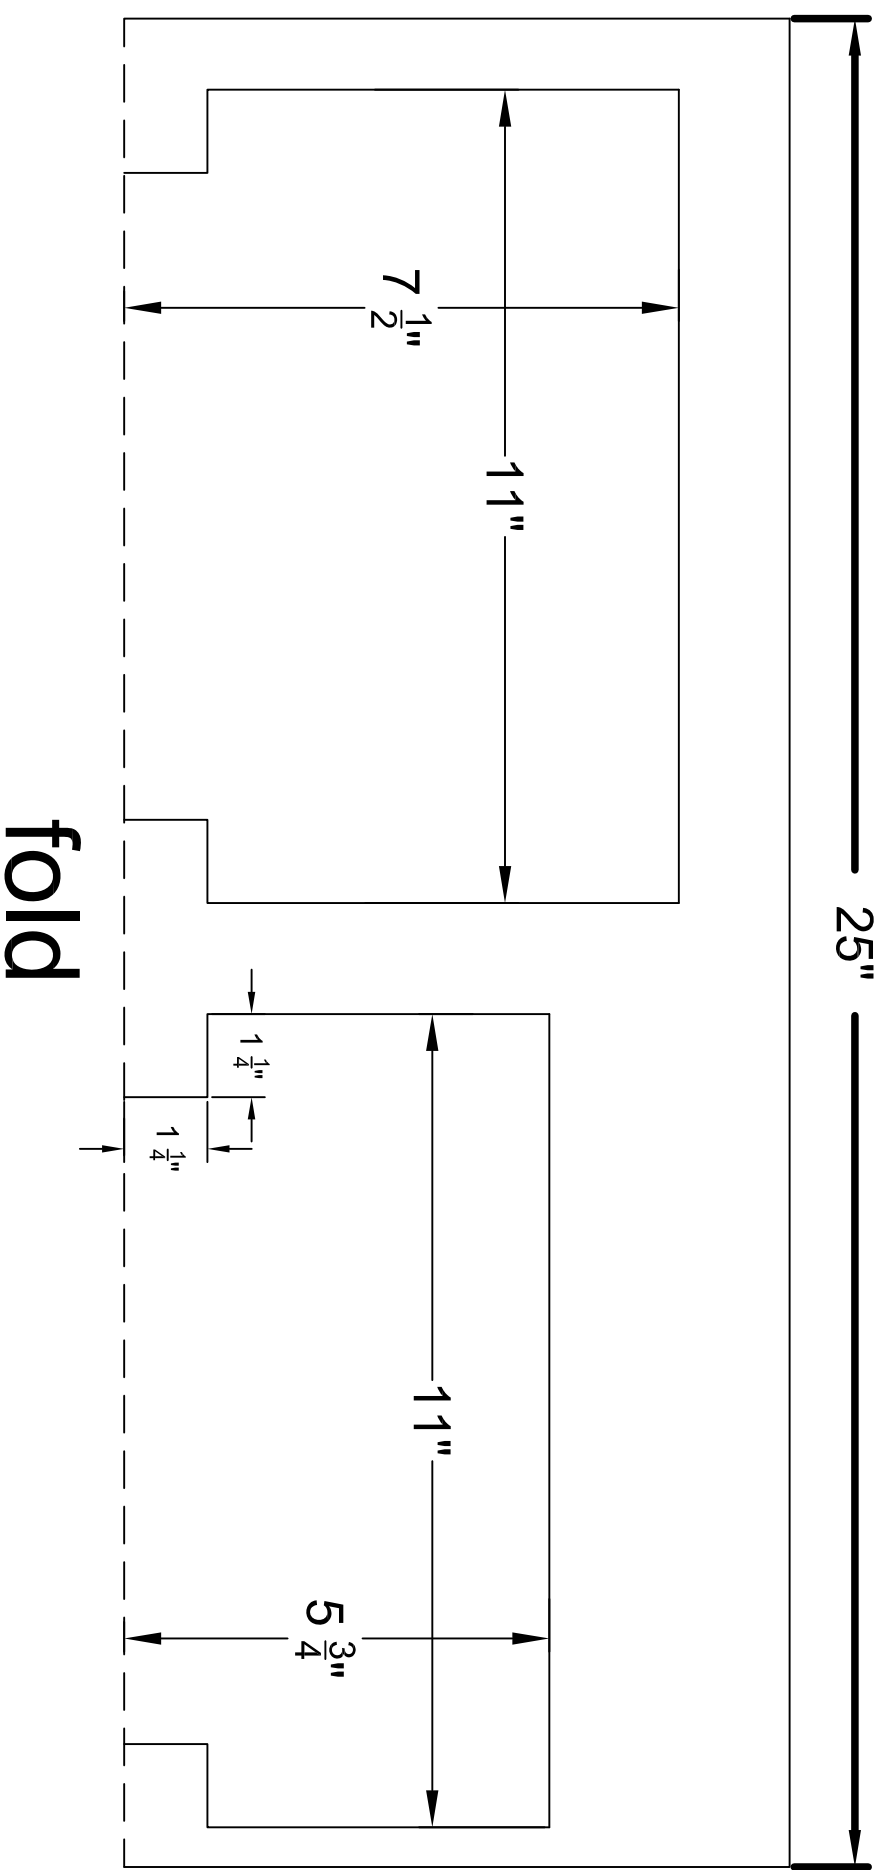


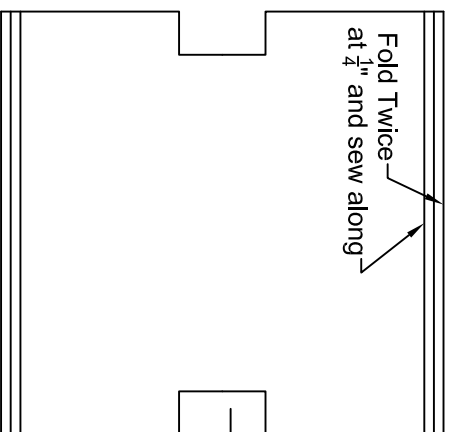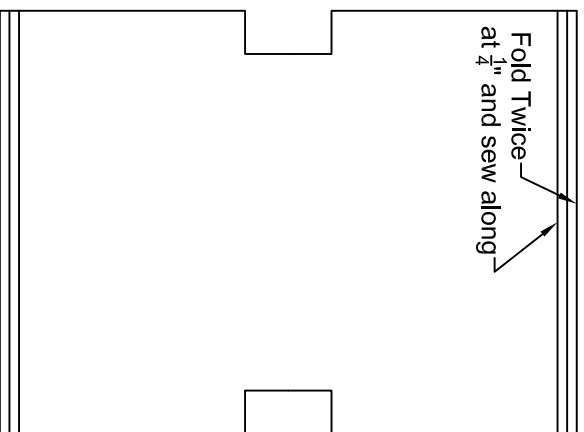


## Step 1

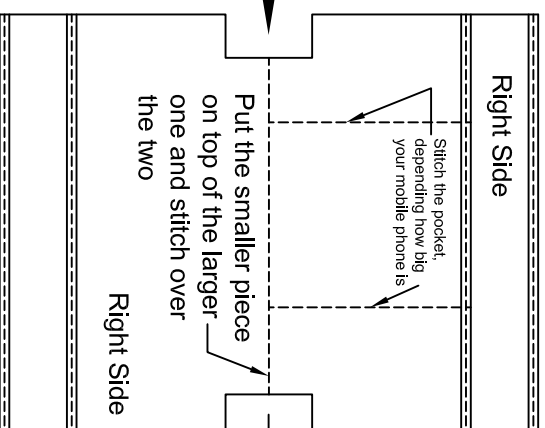

## Step 2

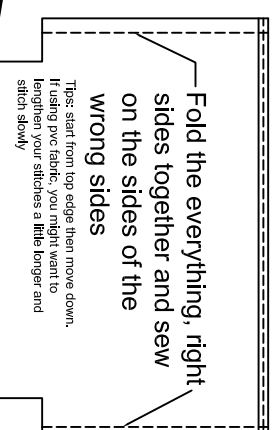


## Step 3

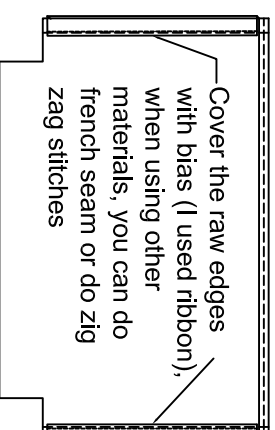


## Step 4

## Step 5

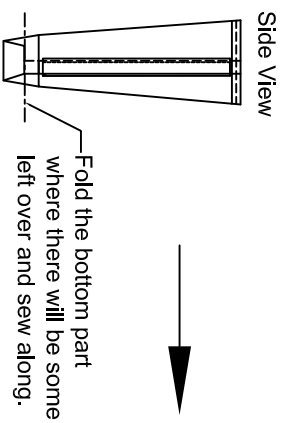

## Step 6

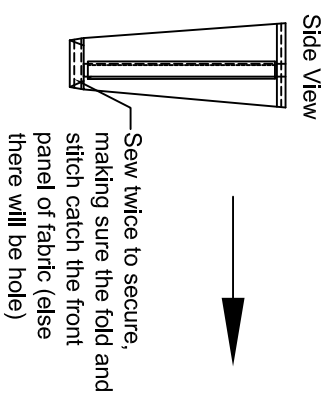

## Step 7

Do the same for the bottom edges as the side edges, you can cover it with bias tape, ribbon or zig zag. Turn your bag over to the right side, then punch 2 holes on each side for the handles



## Step 8

